

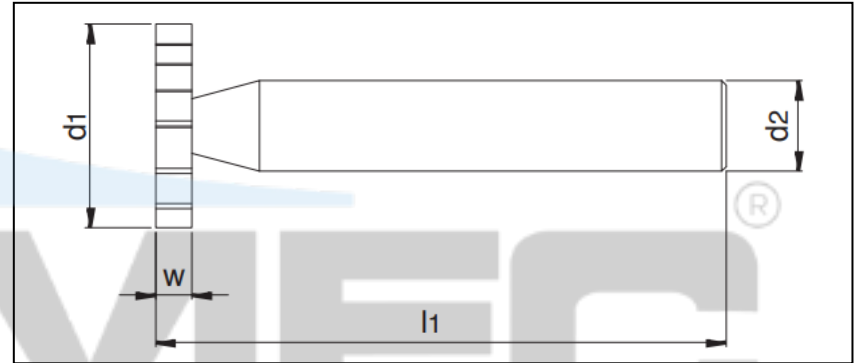


FRESA DE METAL DURO PARA RANHURAR

WOODRUFF

TiAIN

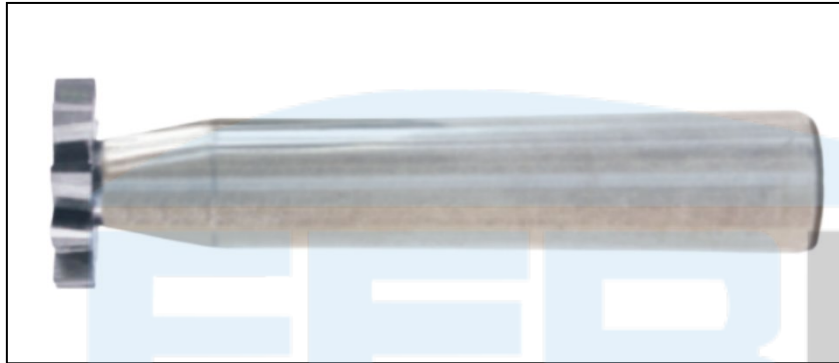

Código	d1	w	l1	d2	z
F MD WOOD 10.5 10C W2 S/C	10.5	2	50	6	10
F MD WOOD 10.5 10C W2.5 S/C	10.5	2.5	50	6	10
F MD WOOD 10.5 10C W3 S/C	10.5	3	50	6	10
F MD WOOD 13.5 10C W2 S/C	13.5	2	56	10	10
F MD WOOD 13.5 10C W3 S/C	13.5	3	56	10	10
F MD WOOD 13.5 10C W4 S/C	13.5	4	56	10	10
F MD WOOD 16.5 10C W3 S/C	16.5	3	56	10	10
F MD WOOD 16.5 10C W4 S/C	16.5	4	56	10	10
F MD WOOD 16.5 10C W5 S/C	16.5	5	56	10	10
F MD WOOD 19.5 12C W3 S/C	19.5	3	63	10	12
F MD WOOD 19.5 12C W4 S/C	19.5	4	63	10	12
F MD WOOD 19.5 12C W5 S/C	19.5	5	63	10	12
F MD WOOD 19.5 12C W6 S/C	19.5	6	63	10	12
F MD WOOD 22.5 12C W4 S/C	22.5	4	63	10	12
F MD WOOD 22.5 12C W5 S/C	22.5	5	63	10	12
F MD WOOD 22.5 12C W6 S/C	22.5	6	63	10	12
F MD WOOD 22.5 12C W8 S/C	22.5	8	63	10	12
F MD WOOD 25.5 14C W5 S/C	25.5	5	63	10	14
F MD WOOD 25.5 14C W6 S/C	25.5	6	63	10	14