


ADAPTADOR PARA TROCA RÁPIDA

COM EMBREAGEM DE SEGURANÇA

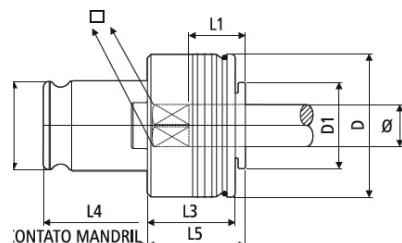

Modelo	Capacidade Roscar	Haste ø	Mandril Indicado	D dia.	D1 dia.	D2 dia.	L1	L3	L4	L5
KWES/1B	M3-M12	3.5-11.3	1	32	19	19	17	25	21.5	25
KWES/2B	M8-M20	7.0-18.0	2	50	30	31	30	31	35.0	34
KWES/3B	M14-M33	11-28	3	72	48	48	44	41	55.5	45
KWES/4B	M22-M48	18-36	4	95	60	60	71	61	63	68

Código	Modelo	ø	∅	Rosca
03201	KWES/1B	2,8	2,1	(M2,5)
01238	KWES/1B	3,5	2,7	(M3-M5-1/8")
01239	KWES/1B	4	3	(M3,5-M4)
01684	KWES/1B	4,5	3,4	(M4-M6-5/32"-1/4")
02813	KWES/1B	5,5	4,3	(3/16")
01240	KWES/1B	6	4,9	(M5)
01685	KWES/1B	6	4,9	(M6)
01241	KWES/1B	6	4,9	(M8)
01242	KWES/1B	7	5,5	(M10-G1/8"-1/4"-3/8")
01243	KWES/1B	8	6,2	(M8-5/16"-7/16")
01679	KWES/1B	9	7	(M12-3/8"-1/2")
01244	KWES/1B	10	8	(M10)
01245	KWES/1B	11	9	(M14-G1/4"-9/16")
02137	KWES/2B	6	4,9	(M8)
02138	KWES/2B	7	5,5	(M10-G1/8"-1/4"-3/8")
01957	KWES/2B	8	6,2	(M8-5/16"-7/16)
01959	KWES/2B	9	7	(M12-3/8"-1/2")
01958	KWES/2B	10	8	(M10)
01246	KWES/2B	11	9	(M14-G1/4"-9/16")
01247	KWES/2B	12	9	(M16-G3/8"-5/8")
01248	KWES/2B	14	11	(M18-3/4")
01700	KWES/2B	16	12	(M20- G1/2")

Código	Modelo	ø	∅	Rosca
01701	KWES/2B	18	14,5	(M22-G5/8"-7/8")
01702	KWES/2B	18	14,5	(M24-G5/8"- 7/8")
02357	KWES/3B	11	9	(M14-G1/4"-9/16")
02358	KWES/3B	12	9	(M16-G3/8"-5/8")
02359	KWES/3B	14	11	(M18-3/4")
01950	KWES/3B	16	12	(M20-G1/2")
01951	KWES/3B	18	14,5	(M22-G5/8"-7/8")
02828	KWES/3B	18	14,5	(M24-G5/8"-7/8")
01952	KWES/3B	20	16	(M27-G3/4"-1")
01953	KWES/3B	22	18	(M30-G7/8"-1.1/8")
01954	KWES/3B	25	20	(M33-G1"-1.1/4")
01955	KWES/3B	28	22	(M36-G1.1/8"-1.3/8")
04542	KWES/4B	18	14,5	(M22-G5/8"-7/8")
04543	KWES/4B	18	14,5	(M24-G5/8"-7/8")
04544	KWES/4B	20	16	(M27-G3/4"-1")
04545	KWES/4B	22	18	(M30-G7/8"-1.1/8")
04546	KWES/4B	25	20	(M33-G1-1 1/4")
04547	KWES/4B	28	22	(M36-G1 1/8"-1.3/8")
04548	KWES/4B	32	24	(M39-1.1/2")
02935	KWES/4B	32	24	(M42-1.5/8")
04549	KWES/4B	36	29	(M45-G1.3/8"-1.3/4")
04550	KWES/4B	36	29	(M48-G1.1/2"-1.7/8")